


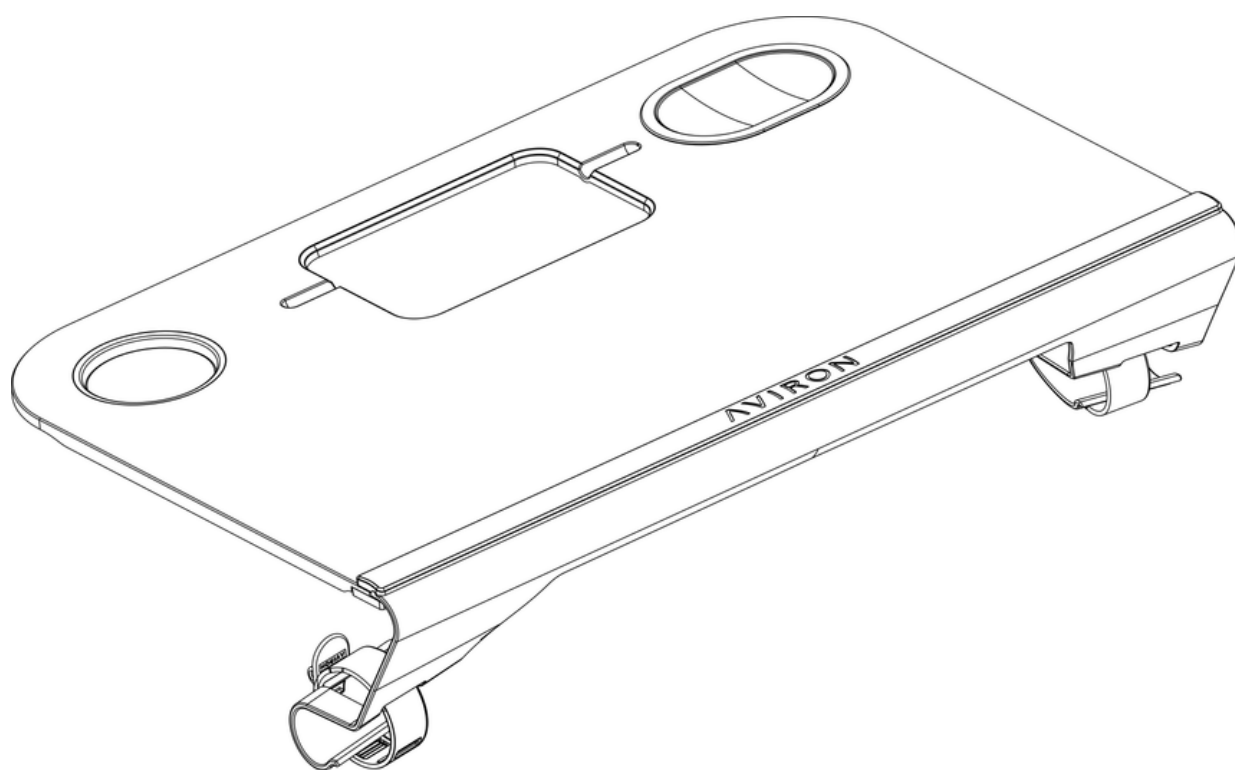

TREADMILL WALKDESK

USER MANUAL

AVIRON ACTIVE

END BORING WORKOUTS

We're thrilled you've chosen the Aviron Treadmill WalkDesk. For the best experience, please review the instruction manual before use.

Table of Contents

PRODUCT OVERVIEW AND SPECIFICATIONS	2
WalkDesk Details	2
Safety Instructions	3
ASSEMBLY INSTRUCTIONS	4
CARE AND MAINTENANCE	9
Cleaning	9
TERMS AND CONDITIONS	10
WARRANTY	11

PRODUCT OVERVIEW AND SPECIFICATIONS

⚠ This product is designed exclusively for use with the Aviron Justice and Podium Treadmill models and is not compatible with any other equipment. No tools or fasteners are required for assembly.


Product Dimensions and Specifications

Product (L x W x H): 27.2 x 18.75 x 6.7 inches / 690 x 475 x 170 mm

Total Weight: 4.4 lb / 2 kg

Maximum Load: 22 lb / 10 kg

Product Details

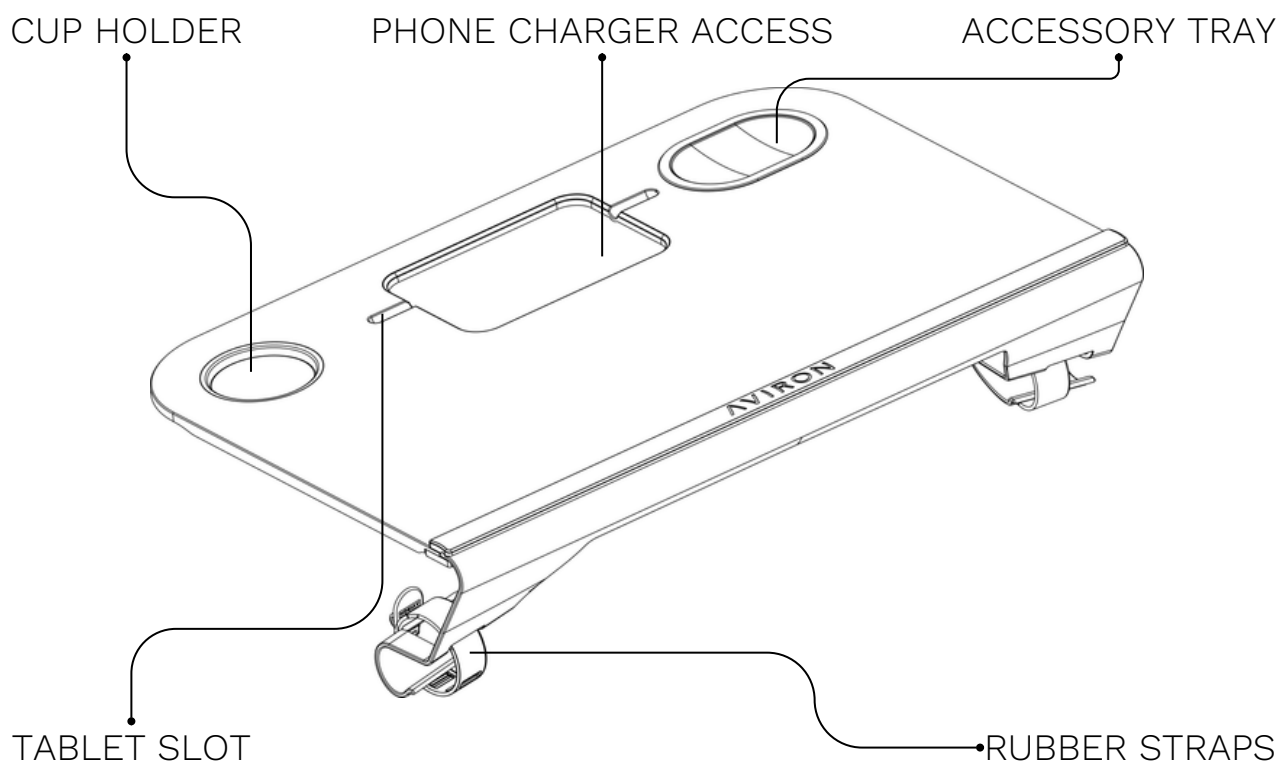

In the Box:

A – Desk Surface

B – C-hook Frame

PRODUCT OVERVIEW AND SPECIFICATIONS

Safety Instructions


⚠ WARNING: Use the WalkDesk only at walking speeds up to 2 mph (3 km/h). Do not jog or run with the WalkDesk attached. At higher speeds, items can slide off toward the belt, your view of your feet is blocked, and there is no time to react.

⚠ WARNING: A laptop, tablet, or other item placed on the desk will cover the Control Panel buttons. Familiarize yourself with the button layout before starting your workout so you can reach and press Stop from underneath the desk without needing to see it. Confirm your safety key is engaged and clipped to your clothing before every workout. Use the Safety Key only in an emergency, pulling it will stop the treadmill immediately but will also exit your workout session.

- The WalkDesk is not a handrail and must not be leaned on or used to bear body weight.
- Keep drinks secured in the cup holder at all times and avoid overfilling. A spilled or overfilled drink can drip onto the moving belt and create a slip hazard.
- Remove the WalkDesk before folding or moving the treadmill.

ASSEMBLY INSTRUCTIONS

Step 1

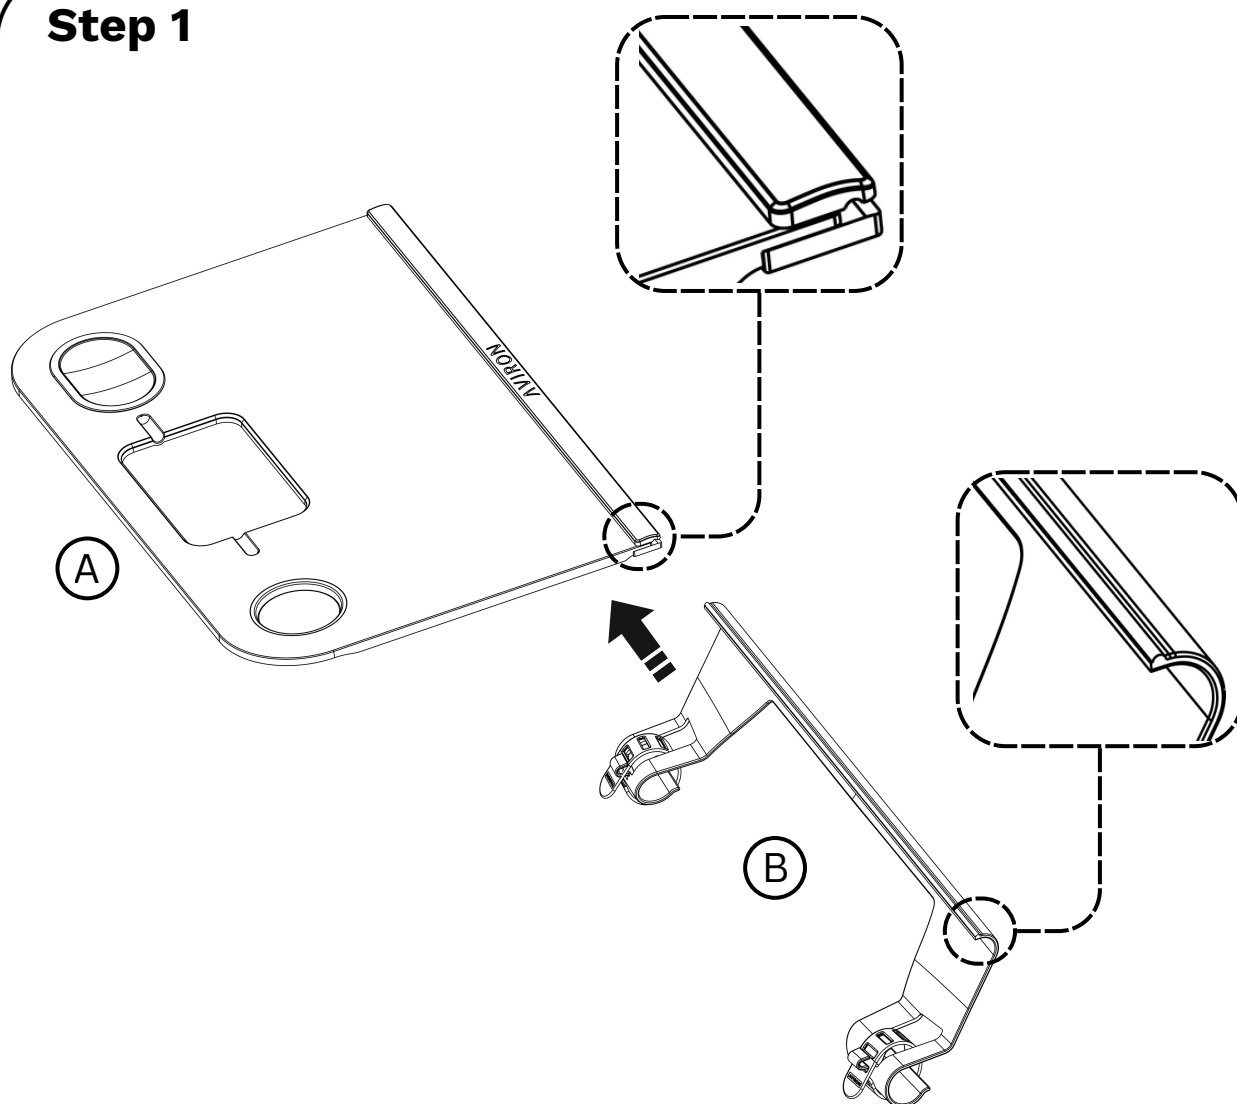

Parts:

(A) (B)

Tools:


Fasteners:

Place the Desk Surface (A) face up. Hold the C-hook Frame (B) with the hooks pointing down and align its rounded lip with the groove that runs along the underside of the desk, as shown in the detail views. Starting from one end, slide the frame along the groove, keeping it straight, until it is fully seated and centered.

NOTE: Keep part (B) level while sliding. Do not twist it or force it at an angle.

ASSEMBLY INSTRUCTIONS

Step 2

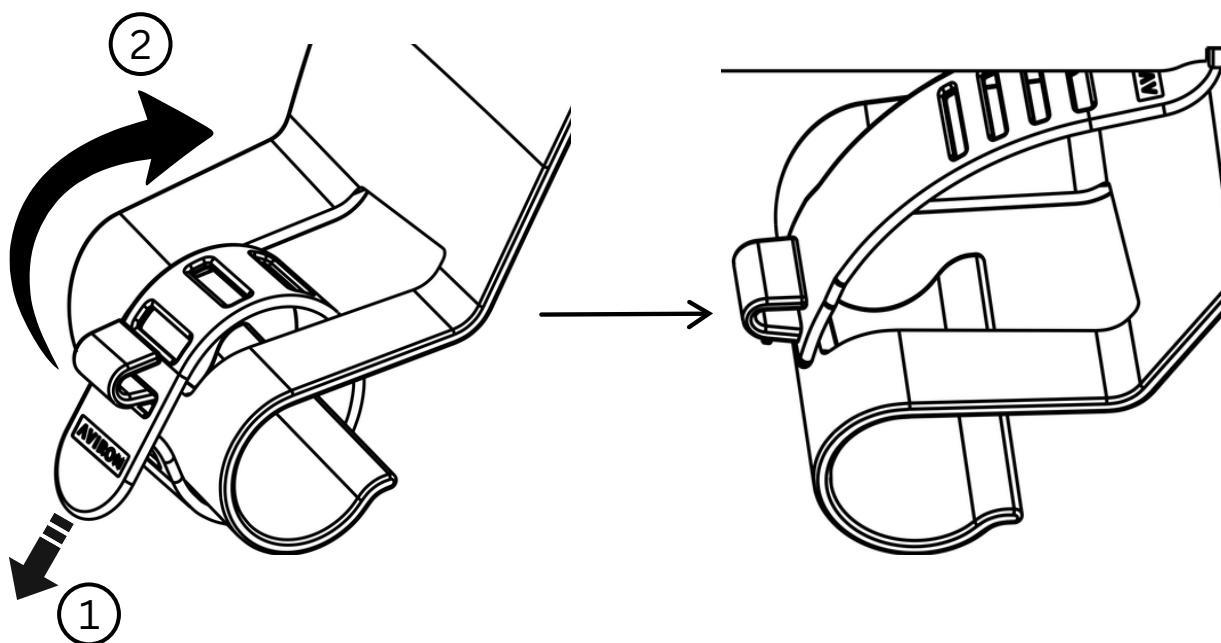

Parts:


Tools:

Fasteners:

Prepare both C-hooks before installation: (1) gently pull the rubber strap outward, then (2) lift it off its latch, leaving the base of the strap attached, as shown. Repeat on the second hook.

ASSEMBLY INSTRUCTIONS

Step 3 (A)

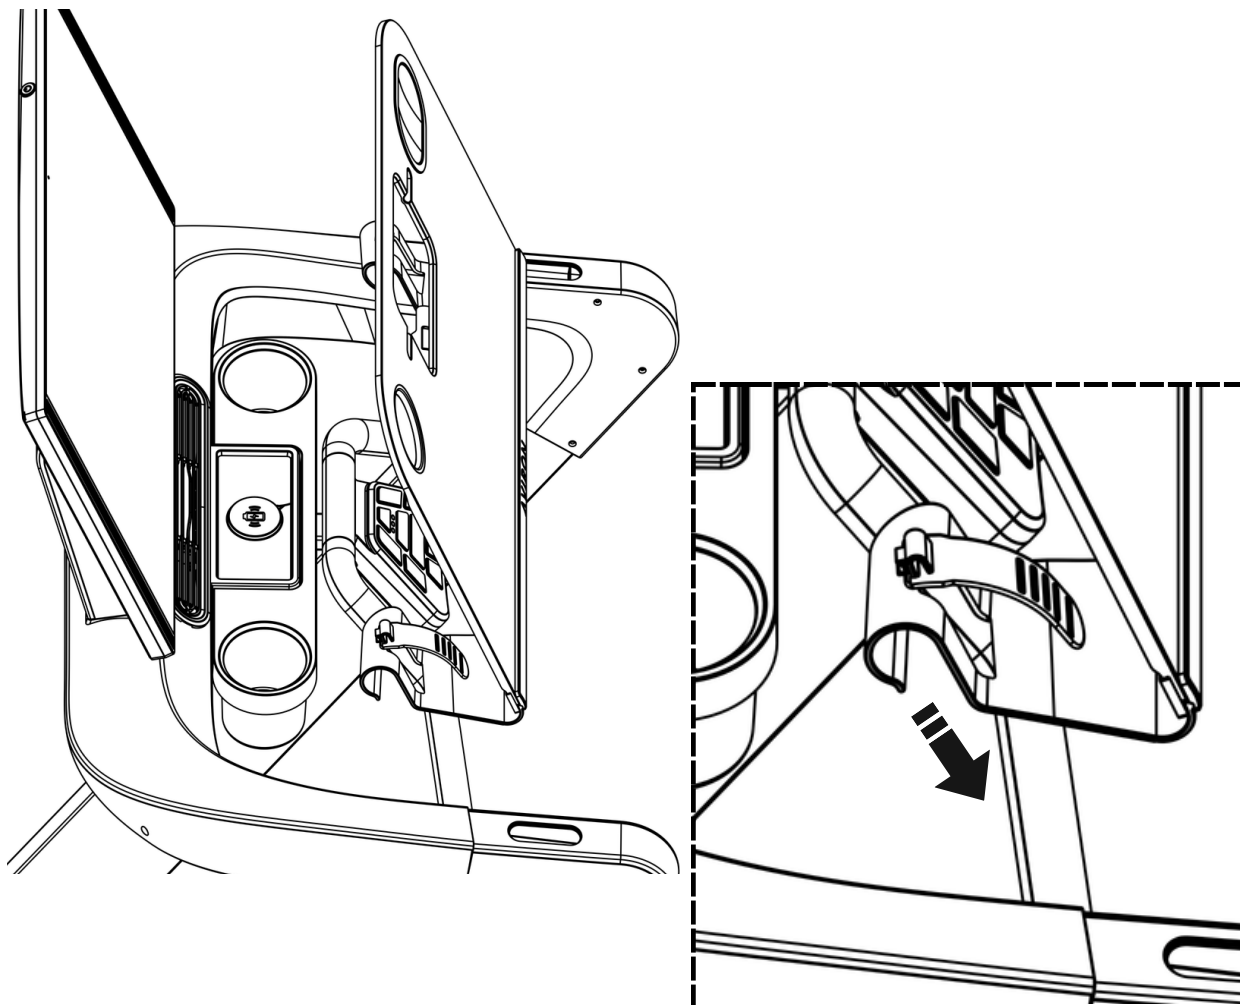

Parts:


Tools:

Fasteners:

Hold the WalkDesk in a near-vertical position and bring it toward the treadmill's Console Base. Rest both C-hooks on the straight section of the handlebars, then gently press each C-hook down until it wraps fully around the bar, as shown in the detail view.

ASSEMBLY INSTRUCTIONS

Step 3 (B)

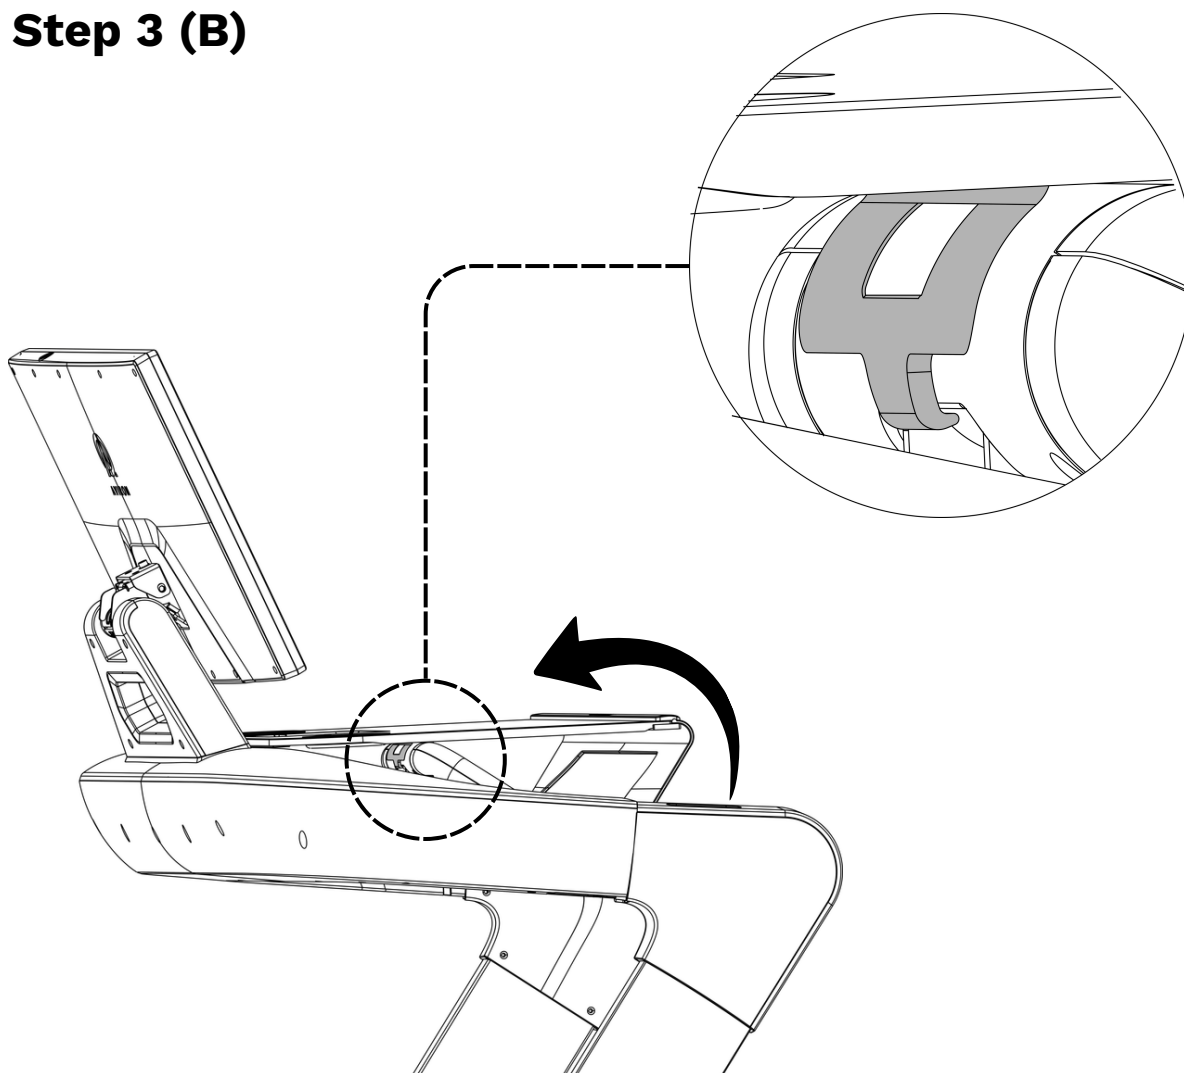

Parts:

Tools:


Fasteners:

With both C-hooks attached to the handlebars, tilt the WalkDesk down until it rests over the Control Panel on the Console Base. Confirm that the desk's center support clips securely onto the Control Panel housing, as shown in the detail view.

NOTE: See Safety Instructions on page 3 regarding Control Panel visibility.

ASSEMBLY INSTRUCTIONS

Step 4

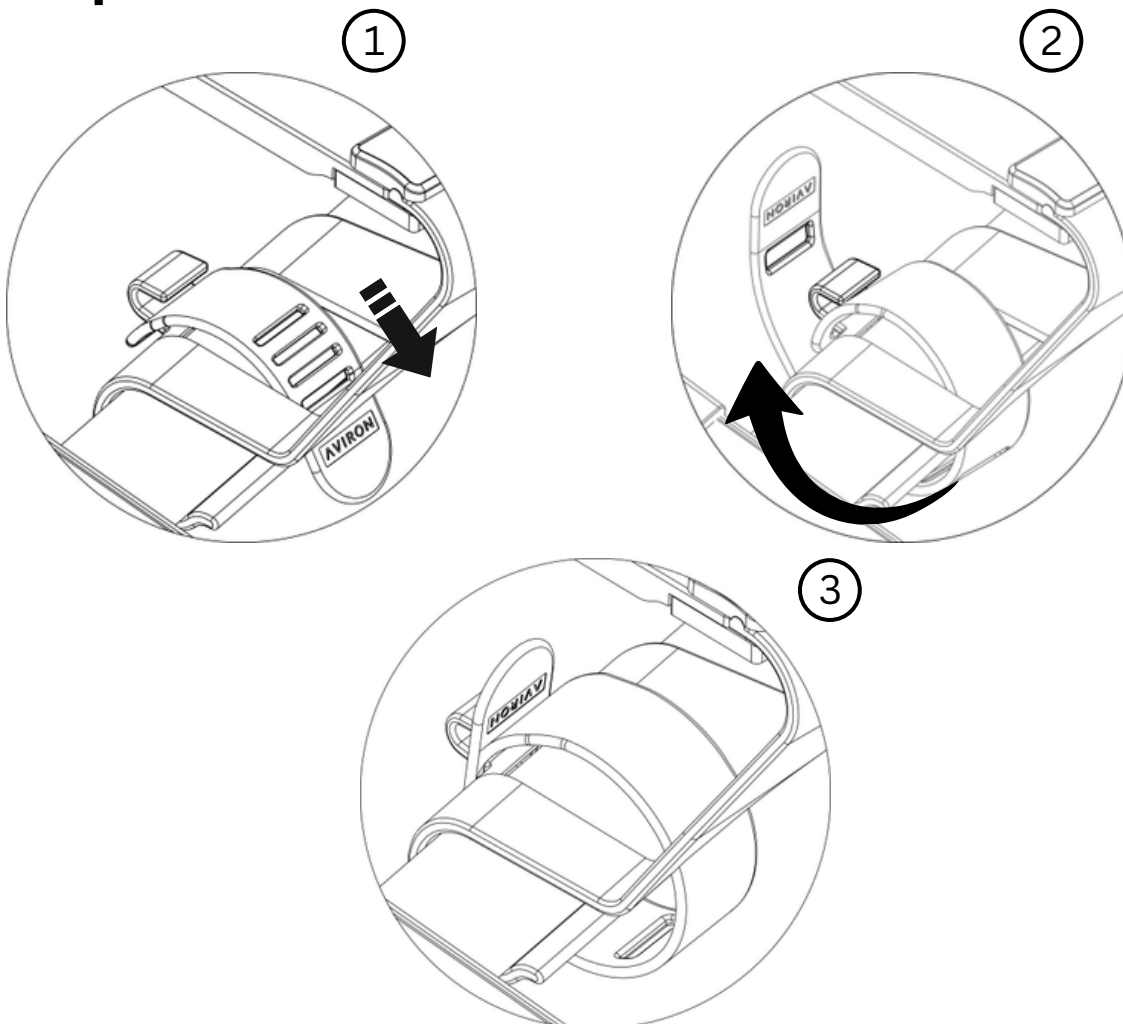

Parts:

Tools:

Fasteners:

Secure the desk by re-attaching each rubber strap: (1) bring the strap over the top of the handlebar, (2) loop it around the bar, and (3) hook its end back onto the latch. Repeat on the second hook and confirm both straps are snug. This completes the assembly.

CARE AND MAINTENANCE

Please follow these care guidelines to extend the desk's lifespan:

- Exercise care while installing or removing the desk. To remove the desk, undo the straps (reverse of Step 4), unclip and lift the desk off the handlebars (reverse of Step 3), then re-latch the straps around the C-hooks for safe storage.
- DO NOT apply force or try bending the support hooks.
- DO NOT place objects heavier than 22 lb (10kg) on the desk.
- DO NOT stretch the rubber straps more than required for installation.
- Remove the WalkDesk before folding or moving the treadmill.

Cleaning

Regular cleaning is essential to maintain the desk's performance and extend its lifespan. Follow these guidelines for safe and effective cleaning:

- Before and after each workout, wipe down the desk's top surface using a dry cloth.
- Clean and disinfect the top surface with alcohol-free and ammonia-free solutions.

CAUTION:

1. DO NOT use abrasive cleaners, as they can damage the product's finish.
2. DO NOT spray or pour liquids directly onto the desk.
3. DO NOT allow any liquids to drip into the desk's openings.
4. DO NOT allow sweat to sit on the desk, as prolonged exposure to moisture and salt can cause corrosion and material degradation.

TERMS AND CONDITIONS

General Policies

Aviron Interactive Inc. ("Aviron") aims to satisfy you (the "customer") completely. Plans and specifications are interpreted as required, but Aviron takes no responsibility that the information provided is suitable for the intended purpose. Aviron reserves the right to accept or refuse any order as part of its policy of continuous equipment improvement. All information supplied by Aviron is believed to be accurate, but Aviron is not liable for errors or misinterpretations.

Exclusion of incidental, consequential, and certain other damages

To the maximum extent permitted by applicable law, in no event shall Aviron or its suppliers nor anyone else involved in the production or delivery of this equipment be liable for any indirect, special, consequential, punitive, or incidental damages whatsoever (including, but not limited to, damages for loss of profits or loss of data or confidential or other information, for business interruption, loss of business information, and the like) arising out of or related to this agreement or the use or inability to use such equipment, the provision of or failure to provide support or other services, information, software, and related content through the Aviron equipment or otherwise arising out of the use of the Aviron equipment, or otherwise under or in connection with any provision of this license, even in the event of the fault, tort (including negligence), misrepresentation, strict liability, breach of contract or breach of warranty of Aviron or any supplier, and even if Aviron has been advised of the possibility of such damages. In no event shall Aviron's liability hereunder, if any, exceed the purchase price paid by the customer for the Aviron equipment.

Disclaimer

The information in this manual is for reference only. The product described may be modified as part of Aviron's continuous research and development, without prior notice. Aviron accepts no liability for damages, losses, or expenses arising from this manual or the product described herein.

Warranty

Your *Aviron Treadmill WalkDesk* is covered by a limited warranty. For detailed terms and conditions, please visit our website:

www.avironactive.com/support/general/warranty/

Support

If you need help or run into any issues, please visit our support page:

www.avironactive.com/support/general/

ENDING BORING WORKOUTS



Aviron Active

265 Bartley Drive
Toronto, Ontario
M4A 2N7, Canada

avironactive.com

Phone: 877-955-4222

General email: hello@avironactive.com

Support email: support@avironactive.com

Rev. 20260723